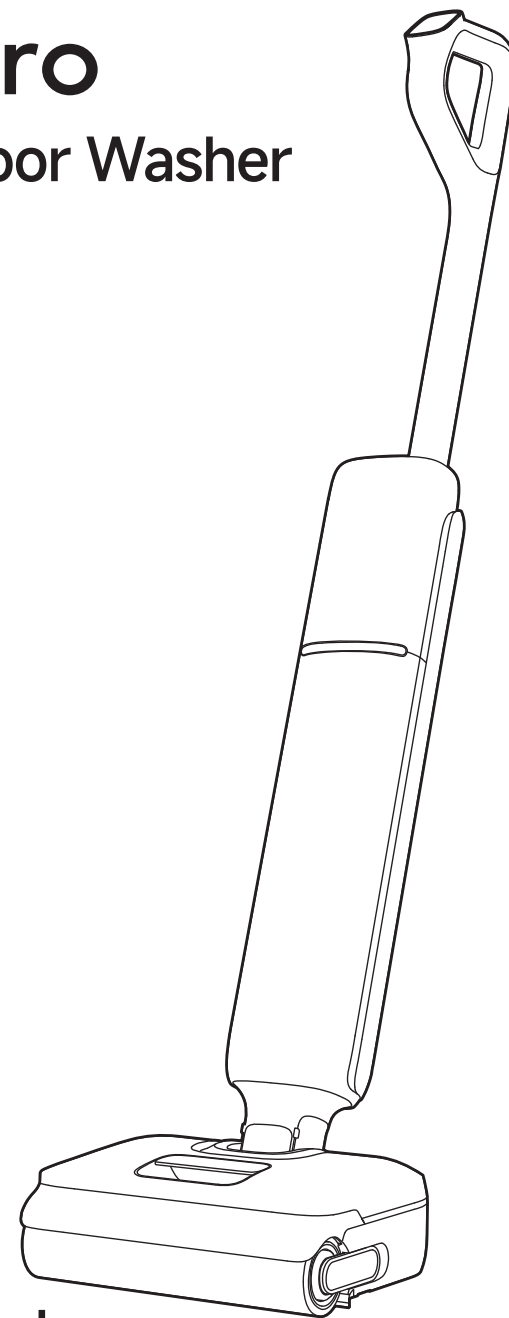 


Aero Pro

Cordless Floor Washer



Website: <https://global.dreametech.com>
Manufactured by: Dreame Trading (Tianjin) Co.,Ltd.
Made in China



User Manual

The illustrations in this manual are for reference only.
Please refer to the actual product.

DREAME

THANK YOU

FOR PURCHASING THIS DREAME
CORDLESS FLOOR WASHER.

Scan for Quick Start

Scan the QR code to access the video tutorial and the user manual.

Register your Dreame account to receive special offers and updates.



Contact Us for Support

Your satisfaction is our priority. Before considering a return, please reach out to our friendly support team. We are ready to help troubleshoot and find a solution, ensuring you get the most out of your product.



Customer Service: +1 (866) 977-5177
(Mon.to Sat.9:00-21:00,Sun.9:00-12:00 Eastern Time)



support.na@dreame.tech

Contents

EN	User Manual	01
FR	Mode d'emploi	17
ES	Manual del usuario	32

Important Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE). Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

WARNING- To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors. Do not use on wet surfaces during charging.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children, pets or plants.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle charging base, including charging base plug, and charging base terminals with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- To reduce the risk of fire, do not use a flammable or combustible liquid to clean a floor.
- Do not use without water tank and/or filter in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that has the switch on invites accidents.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

Important Safety Instructions

- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified battery packs may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130° C/266° F may cause explosion.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the appliance is maintained.
- Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.
- Always turn off this appliance before connecting or disconnecting motorized nozzle.
- Risk of injury. Brush may start unexpectedly. Keep the switch in off position before cleaning or servicing.
- Turn off all controls before unplugging.
- The appliance should be stored, used and charged only in the temperature range of 4° C/39.2° F~40° C/104° F.
- This appliance contains batteries that are non-replaceable.
- To reduce the risk of fire and electric shock due to internal component damage, use only dreamer cleaning fluid intended for use with this appliance. See the Cleaning Fluid section of this manual.

SAVE THESE INSTRUCTIONS

Household use only.

To reduce the risk of electric shock, the appliance has a polarized plug (one-blade is wider than the other). This-plug will fit in a polarized outlet-only one-way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician-to install the proper outlet. Do not change the plug in any way.

---	Direct current
~	Alternating current

FCC Information

Compliance Information	
Product Name	Cordless Floor Washer with Charging Base
Produce Model	Cordless Floor Washer Model: HHR32B Charging Base Model: HCBBI
Compliance Statement	This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Correspondence of the responsible party in USA	
Company	DREAME TECHNOLOGY USA INC
Address	16192 Coastal Highway, Lewes, Delaware 19958, County of Sussex
Email	support.us@dreame.tech

Caution:

This device complies with Part 15 of the FCC Rules / Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference. (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

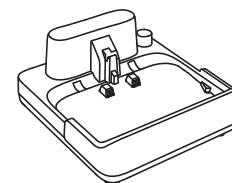 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Product Overview

Packing List




Handle



Charging Base



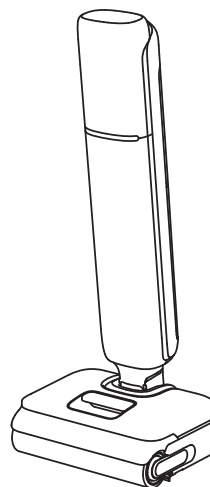 
Filter



Main Body



 
Cleaning Brush



Cleaner


Product Overview

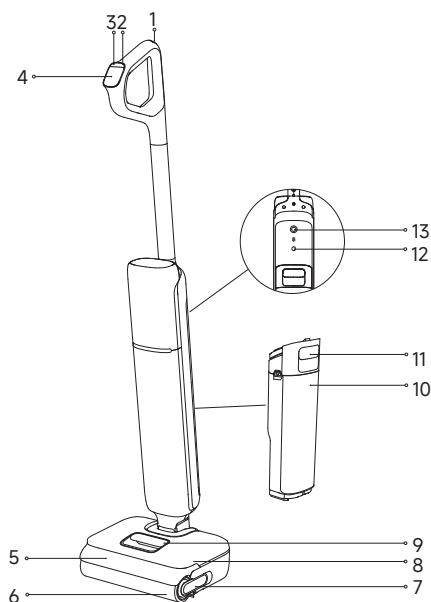 Vacuum



- | | | |
|------------------------|---------------------------|---|
| 1 Self-Cleaning Button | 6 Roller Brush | 11 Used Water Tank Handle |
| 2 Power Switch | 7 Roller Brush Handle | 12 Voice Prompt Button |
| 3 Mode Switch | 8 Clean Water Tank | <ul style="list-style-type: none"> • Press briefly to activate the voice prompt or adjust the volume. • Press and hold for 3 seconds to switch between languages. |
| 4 Display Screen | 9 Clean Water Tank Handle | 13 Omnidirectional Wheel |
| 5 Roller Brush Cover | 10 Used Water Tank | |

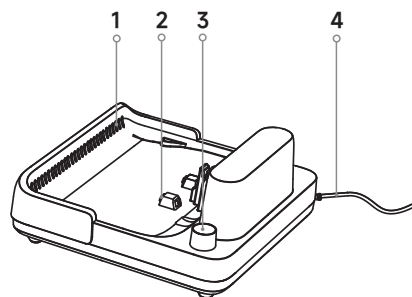 
Charging Base



- 1 Air-Drying Outlet
- 2 Charging Contacts
- 3 Accessory Storage Slot
- 4 Power Cord

Installation & Charging

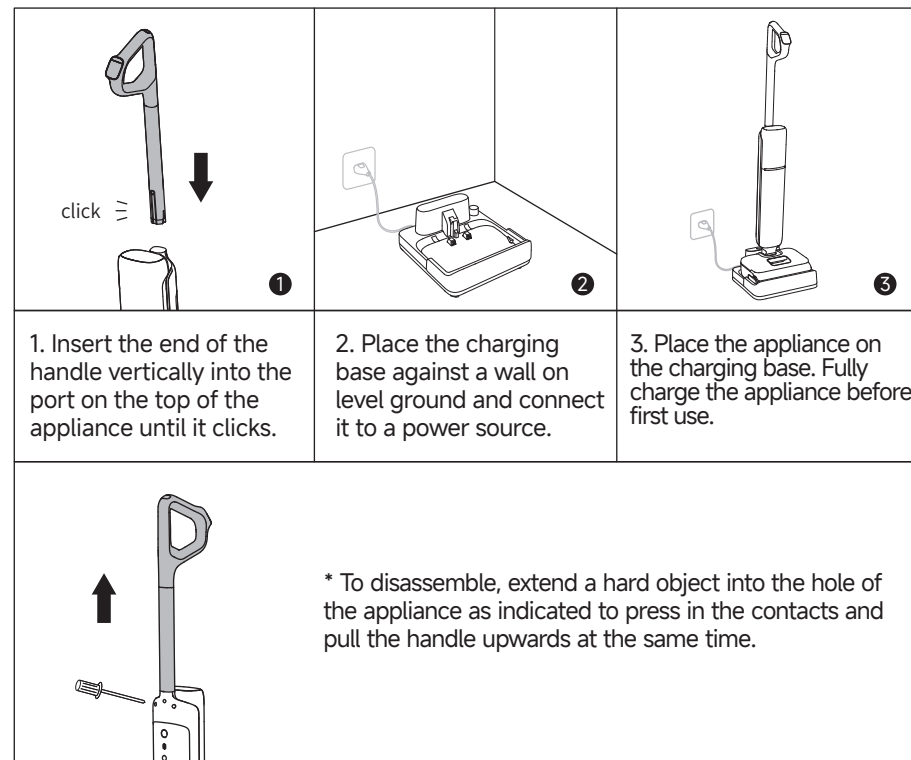 
Fully charge the appliance before first use.



Note:

- If there is no operation within 10 minutes of being fully charged, the appliance will enter sleep mode. Please restart the appliance if you need to use it.
- To extend the battery life time, the battery keeps cooling down automatically after you have used the appliance for a long time.

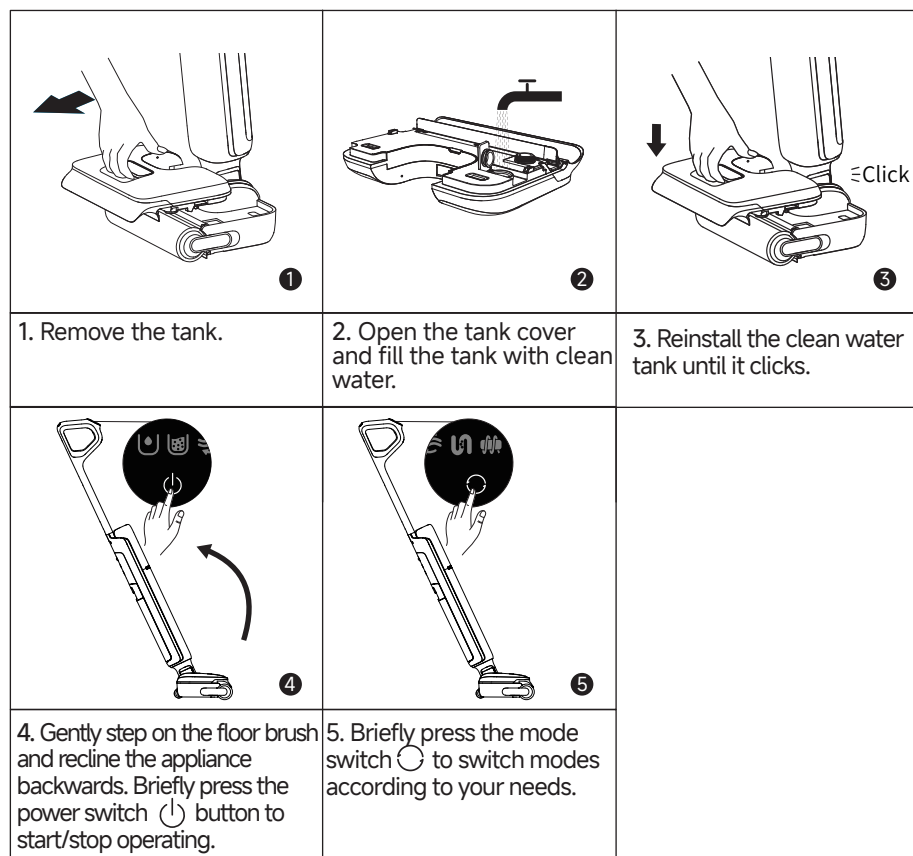 Starting Cleaning



Note:

- Do not vacuum any foamy liquids.
- The appliance is suitable for cleaning floors, marble, tiles and other hard surfaces.
- When the appliance is in operation, do not lift it off the ground, move it or tilt it. Otherwise, the used water may flow into the motor.

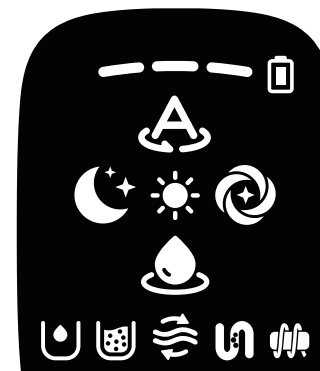 
Add Cleaning Fluid

To reduce the risk of fire and electric shock due to internal component damage, use only Dreame Trading (Tianjin) Co., Ltd. AWH10 cleaning fluid intended for use with the appliance.

1. Remove the seal before use.
2. Measure the floor cleaner with the bottle cap (*approximately 10 ml/0.34 fl oz per cap).
3. Pour it into the clean water tank and gently shake to mix it evenly before use.

Note: Do not add any liquids other than the officially-approved cleaner. The cleaner can be available on the official online store. Refer to the cleaning solution label for specific usage instructions.

Display Screen



Smart Mode

The appliance will detect the stain level and intelligently adjust the suction power and water flow accordingly.



Quiet Mode

The appliance will maintain moderate suction power at a low noise level.



Turbo Mode

Maximum suction power and increased water flow for stubborn stains on hard floors.



Suction Mode

Suck up a large amount of water from the floor.



Dring Mode



Self-Cleaning Mode



Dust Concentration Indicator / Self-Cleaning & Drying Progress Indicator / Charging Indicator

The color of the indicator changes with the amount of dirt in real time.



Insufficient water in the clean water tank

Fill the clean water tank.



The used water tank is full

Empty the used water tank.



Blocked tube

Refer to the Care & Maintenance section to clean the tube and dirt sensor.



Roller brush stuck

Clean the roller brush with the provided cleaning brush.



Appliance malfunction

Please restart the machine to try to troubleshoot. If the prompt still appears, please contact after-sales services for repair.



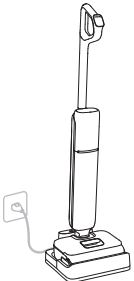 
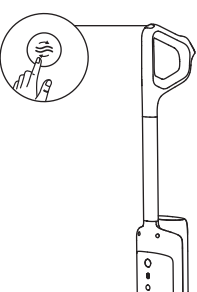 
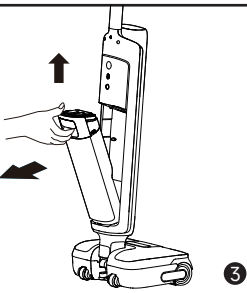 
Battery Indicator

- Solid Green: 50% < Battery level ≤ 100%
- Red: Battery level ≤ 20%

*Breathing light (Operating)

*Battery Indicator color cycles from green to yellow, orange, and red as charge decreases. Recharge when red.



One-Press Self-Cleaning

		
1. Place the appliance back onto the base. Ensure that the water in the clean water tank is sufficient for self-cleaning.	2. Briefly press the self-cleaning button on the top of the handle to start/stop self-cleaning (Battery level $\geq 20\%$).	3. After self-cleaning is complete, the  will light up. Empty the used water tank promptly.




Note:

- After cleaning, promptly return the appliance to the base and ensure the clean water tank is sufficiently filled.
- To switch between Rapid Mode and Deep Mode, press the button again within 3 seconds of activation.
- After self-cleaning is complete, the appliance will automatically enter drying mode; please promptly empty the used water tank. To exit drying mode, press .
- Long-press for 3 seconds to activate Drying directly.

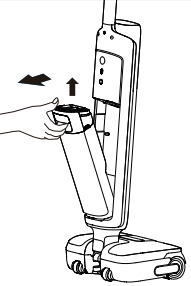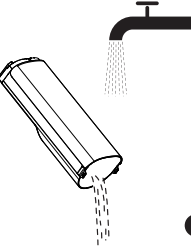  Emptying the Used Water Tank

		
1. Pull the used water tank handle to take out the tank.	2. Hold the used water tank cover and pull it out. Hold the filter and pull up to remove. Remove debris from filter.	3. Pour dirty water out and rinse tank with clean water.

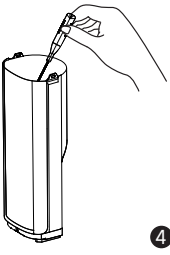 
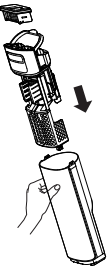 
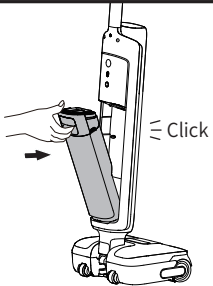 
Emptying the Used Water Tank









		
4. Use the provided cleaning brush to clean the inner walls of the tank.	5. After cleaning, insert filter into the used water tank cover, and insert used water tank cover into the tank.	6. Reinstall the Used Water Tank until you hear a click.

Care & Maintenance

Tips:

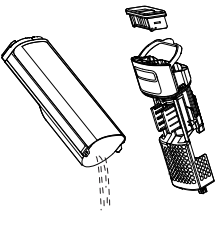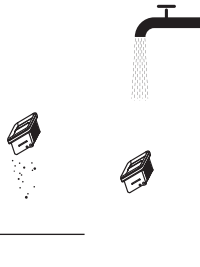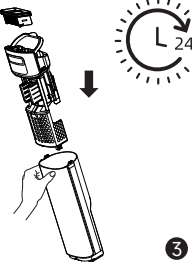   - Turn off the appliance before maintenance. Do not touch the power switch.
- Replace parts if needed. The parts must be replaced by those available from the manufacturer or its service agent.
- If the appliance is not used for an extended period, fully charge it, unplug the power plug, and store the appliance in a cool, low-humidity environment away from direct sunlight. To avoid over-discharge of the battery, charge the appliance at least once every 3 months.

		
1. Pour dirty water out, remove the filter, and rinse the tank and tank cover with clean water.	2. Gently knock off the floating dust on the filter surface. When the filter is dirty and needs washing, rinse it with water.	3. After fully drying the filter, reinstall it into the used water tank cover. Insert used water tank cover into the tank.

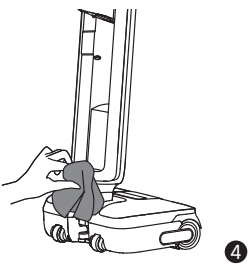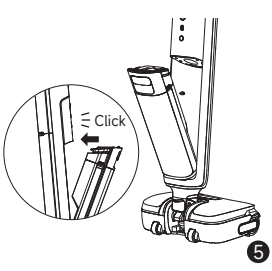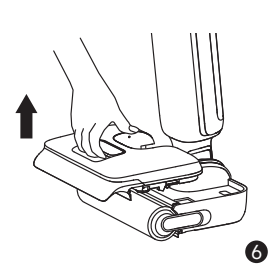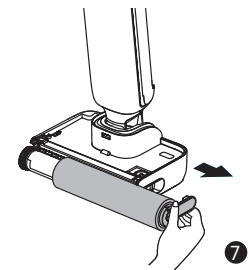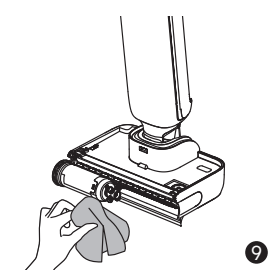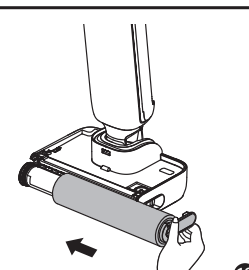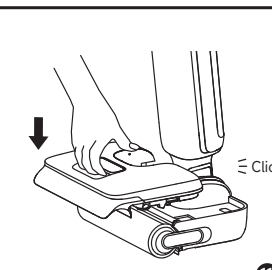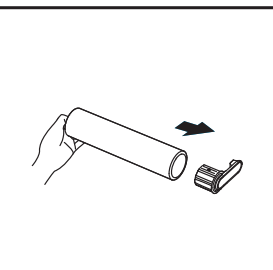        		
4. Gently wipe the tube with a wet cloth before use. Do not rinse the tube.	5. Insert bottom of tank into main body. Tilt tank towards main body until it clicks.	6. Remove the clean water tank.
		
7. Pull out the brush handle and remove the brush.	8. Remove any hair or debris tangled on the roller brush with the provided cleaning brush. Rinse the roller brush with clean water.	9. Wipe the suction inlet with a dry cloth or wet tissue. Do not rinse the brush assembly with water.
		
10. After fully drying the roller brush, hold the roller brush handle and reinstall it.	11. Reinstall the clean water tank until you hear a click.	* Remove the roller brush handle to replace it with a new roller brush, and press it firmly into place.

Note:

- Replacing the filter every 3 to 6 months is recommended.
- Clean as needed. Replacing the roller brush every 3 to 6 months is recommended.

Troubleshooting

If an error occurs, the appliance will stop working. Please refer to the following table for troubleshooting. If the problem persists, please contact customer service.

Error	Possible Cause	Solution
The appliance does not work	The appliance is out of battery or its battery level is low	Fully charge its battery before use
	The appliance is in the upright position	Recline the appliance backwards
	Blockage activated overheat protection mode	Clear the blockage and wait until the temperature returns normal
	The Used Water Tank is full	Empty the Used Water Tank
The appliance charges slowly	The temperature of the battery is too low or too high	Wait until the battery's temperature returns normal
	The filter is clogged	Cleaning the filter
The suction power of the appliance is weak	The suction inlet or tube is blocked by a foreign object	Clean the tube and the suction inlet
	There is too much used water in the Used Water Tank	Empty the Used Water Tank
The motor is making a strange noise	The suction inlet is blocked	Clear any blockage in the suction inlet
	The charging base cable is not plugged into the electrical outlet	Make sure the charging base cable is plugged in
The display screen does not light up while charging	The appliance is not placed onto the charging base properly	Make sure the appliance is placed onto the charging base properly
	The Clean Water Tank is not properly installed in place, or the water in the Clean Water Tank is insufficient	Reinstall or fill the Clean Water Tank
No water is coming out of the appliance	It takes 30 seconds to dampen the roller brush	Turn on the appliance and check again in 30 seconds

Troubleshooting

The vent leaks water	A collision or a sharp pull causes water to enter the motor	Move the appliance gently back and forth while it is turned on
	The filter is not completely dry after being cleaned	Dry the filter completely before use
Self-cleaning fails	The roller brush may be jammed by large debris	Open the roller brush cover to check and clean the roller brush
	The appliance is not placed onto the charging base properly	Make sure the appliance is being charged before self-cleaning
	Self-cleaning cannot be enabled if the battery level is lower than 20%	The self-cleaning function can only be enabled when the appliance is being charged and the battery level is more than 20%
	The Used Water Tank is not installed in place, or the Used Water Tank is full	Reinstall or empty the Used Water Tank
	The Clean Water Tank is not installed in place, or the water in the Clean Water Tank is insufficient	Reinstall or fill the Clean Water Tank

For additional services, please contact us via <https://global.dreametech.com/pages/contact-us>
Website: <https://global.dreametech.com>

Error Prompts and Solutions

If the appliance is not working properly, the screen display will show an error message. Please refer to the troubleshooting table to find your solution.

Error Icon	Possible Cause	Solution
	Insufficient water.	Fill the clean water tank.
	The Used Water Tank is full.	Please clean the used water tank.
	Roller brush stuck.	Clean the roller brush.
	Blocked tube.	Refer to the Care & Maintenance section to clean the tube and dirt sensor.
	Brush roll and duct clogged with dirt.	Refer to the Maintenance & Care section to clean the ducts and the dirt sensor.
	Appliance malfunction	Restart the appliance for troubleshooting. If the problem persists, please contact customer service.

Specifications

Cordless Floor Washer			
Model	HHR32B	Charging Time	≤ 4 hours
Rated Voltage	21.6 V $\overline{---$	Rated Power	315 W
Charging Base			
Model	HCBBI		
Rated Input Current	1.3 A (charging)	Rated Input Power*	380 W (drying)
Rated Input	120 V ~ 60 Hz	Rated Output	27.5 V $\overline{---$ 1.68 A

* The rated input power refers to the power measured during a representative cycle for entering the drying mode.

Battery Disposal and Removal

The built-in lithium-ion battery contains substances that are hazardous to the environment. Before disposing of the battery, make sure the battery is removed by qualified technicians and discarded at an appropriate recycling facility.

- the battery must be removed from the appliance before it is scrapped;
- the appliance must be disconnected from the supply mains when removing the battery;
- the battery is to be disposed of safely.

Removal Guide

1. Use tools to sequentially disassemble the main unit of the appliance and the power source components.
2. Disconnect the terminal connecting the battery to the mainboard.
3. Use tools to sequentially remove the screws securing the battery bracket, then pry open the bracket with a tool and remove the battery.
4. Disassembly should be performed by the manufacturer, an authorized service provider, or qualified professionals.

CAUTION:

- Before removing the battery, disconnect the power and run out the battery as much as possible.
- Unneeded batteries should be discarded at an appropriate recycling facility.
- Do not expose to high temperature environment to avoid risks of explosion.
- Under abusive conditions, liquid may be ejected from the battery. If contact occurs, flush with water and seek medical help.

Warranty

1. Dreame is liable to the consumer for any lack of conformity in material or workmanship not detectable at the time of the purchase.
2. Warranty period: please refer to the customer service office for more information. If the territory where the consumer is located has different regulations, local regulations prevail.
3. The warranty will not be applicable in the following cases:
 - a) Issues due to carelessness, use, or installation that does not comply with the instructions provided by Dreame.
 - b) Tampering and/or modifications of the product by entities or individuals not expressly authorized by Dreame.
 - c) Damage due to accidental causes and/or negligence on the part of the consumer, with particular reference to external parts.
 - d) Parts subject to wear that do not have manufacturing defects.
 - e) No valid purchasing document (receipt, invoice, or other) is provided to certify the date the product was purchased.
 - f) The model and/or numbers of the product on the purchase certificate is not consistent with the model and/or numbers shown on the product.
4. For more warranty information, please refer to the official Dreame website: <https://global.dreame.tech.com>

Battery Disposal and Removal



WEEE Information

All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.