


Dishwasher

Use manual

Model : DH16-DZ601PQSNA

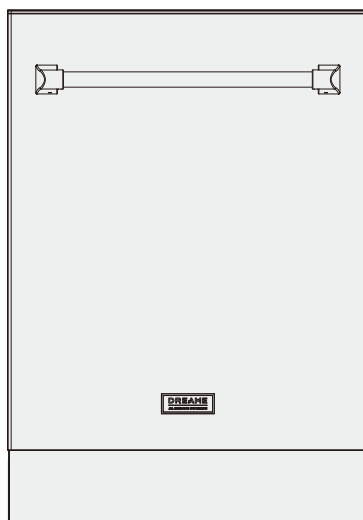

Dreame DZ601 Pro Built-in Dishwasher

Please read this manual carefully before using the product and keep it for future reference.

DREAME

Contents

Important safety instructions	02
Parts and Features	04
Quick steps	05
Operating instructions	06
Technical parameter list.....	14
Cycle and option descriptions	15
Dishwasher features.....	18
User-maintenance instructions	19
Troubleshooting	20
Error codes	24
Wash cycle information	25
Warranty Terms	27
Warranty Card	28

Important safety instructions

THANK YOU for purchasing this high-quality product.

For future reference please make a note of your product model and serial numbers.

These can be located near the door on the left or rightside of the dishwasher interior.

Dishwasher Safety

Your safety and others' are very important.

We have provided many important safety messages in this manual and on your appliance.

Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol "WARNING."

WARNING

These words mean: You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Save these instructions

WARNING: When using the dishwasher, follow basic precautions, including the following:

- a. Read all instructions before using the dishwasher.
- b. Use the dishwasher only for its intended function.
- c. Use only detergents or rinse agents recommended for use in a dishwasher, and keep them out of the reach of children.
- d. When loading items to be washed:
Locate sharp items so that they are not likely to damage the door seal;
- 2) Load sharp knives with the handles up to reduce the risk of cut-type injuries.
- e. Do not wash plastic items unless they are marked "dishwasher safe" or the equivalent.
For plastic items not so marked, check the manufacturer's recommendations.
- f. Do not operate the dishwasher unless all enclosure panels are properly in place.
- g. Do not tamper with controls.
- h. Do not abuse, sit on, or stand on the door, lid, or dishracks of the dishwasher.
- i. To reduce the risk of injury, do not allow children to play in or on the dishwasher.
- j. Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. **HYDROGEN GAS IS EXPLOSIVE.**
If the hot water system has not been used for such a period, before using the dishwasher turn on all hot water faucets and let the water flow from each for several minutes.
This will release any accumulated hydrogen gas.
As the gas is flammable, do not smoke or use an open flame during this time.
- k. Remove the door to the washing compartment when removing an old dishwasher from service or discarding it.

Important safety instructions

FCC requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

a. this device may not cause harmful interference.

b. this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try

to correct the interference by one or more of the following measures:

–Reorient or relocate the receiving antenna.

–Increase the separation between the equipment and receiver.

–Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

–Consult the dealer or an experienced radio/TV technician for help.

Grounding instructions

For a grounded, cord-connected dishwasher:

The dishwasher must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. The dishwasher is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances.

WARNING: Improper connection of the equipment-grounding conductor can result in a risk of electric shock.

Check with a qualified electrician or service representative if you are in doubt whether the dishwasher is properly grounded.

Do not modify the plug provided with the dishwasher; if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

For a permanently connected dishwasher:

The dishwasher must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the dishwasher.

WARNING



Tip Over Hazard

Do not use dishwasher until completely installed.

Do not push down on open door.


Doing so can result in serious injury or cuts.

State of California Proposition 65 Warnings:

WARNING: This product contains one or more chemicals known to the State of California to cause cancer.


WARNING: This product contains one or more chemicals known to the State of California to cause birth defects or other reproductive harm.

Parts and Features

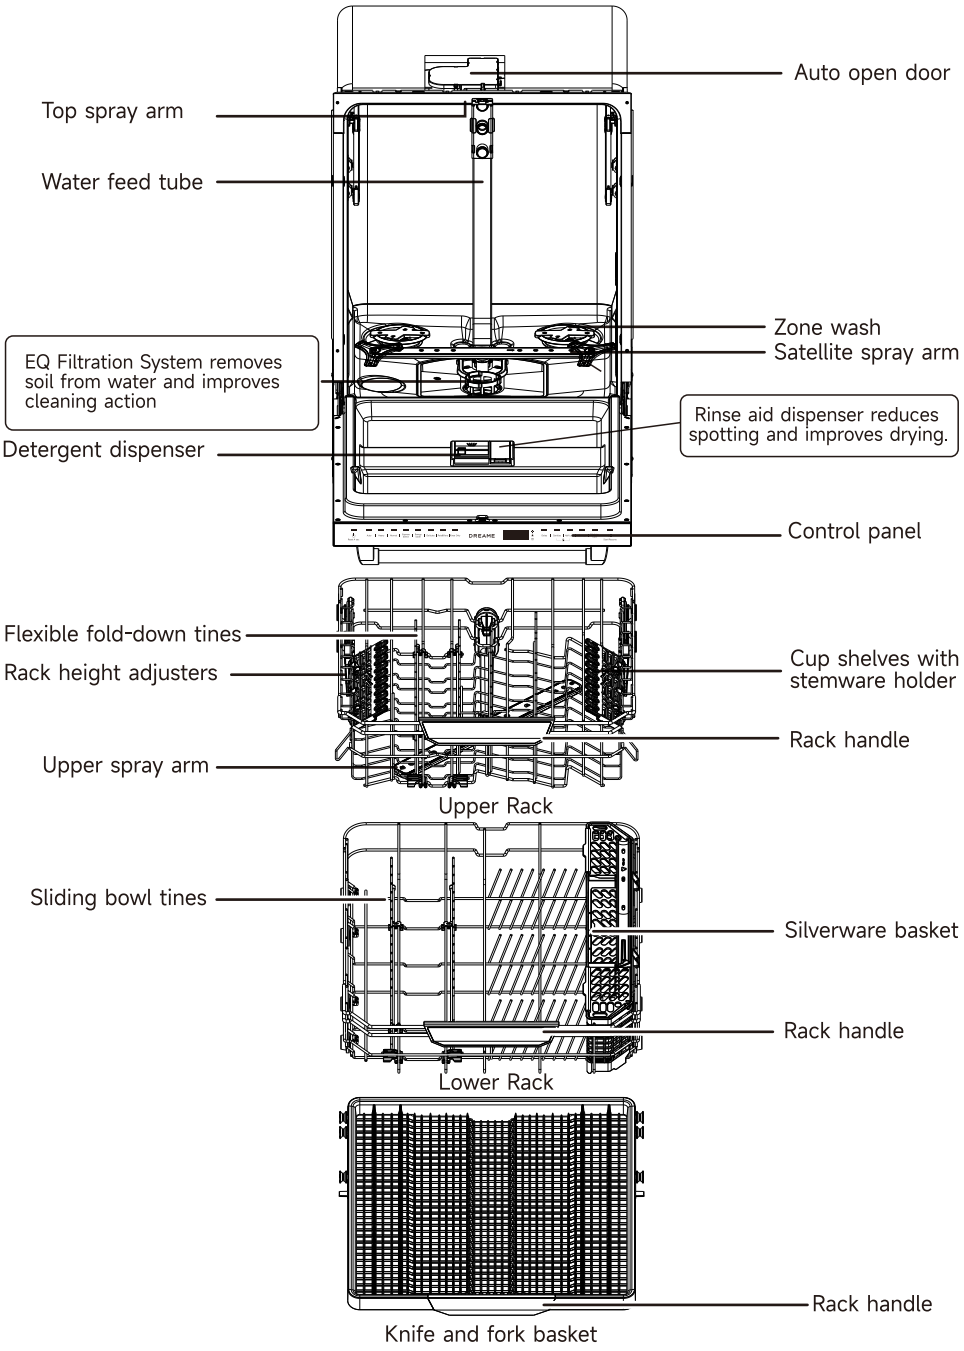


Quick steps

1 Prepare and load dishwasher.

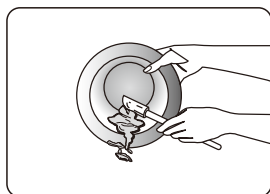


Scrape off excess food into garbage or food disposer.

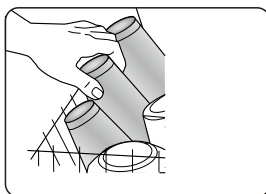

Load dishes so that water spray will reach every surface.



2 Select a cycle and options.

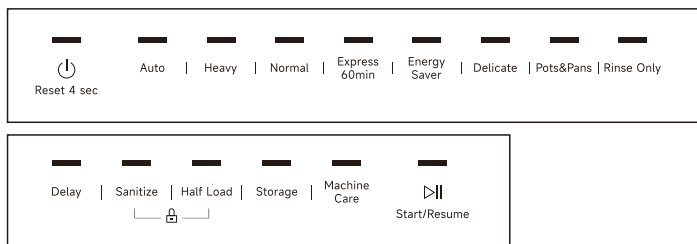

☼ — A
 🔒 — B
 🔄 — C

A: add the rinse aid when it's lightened
 B: child lock when it's lightened
 C: Auto open dry when it's lightened

3 Add detergent and rinse aid.

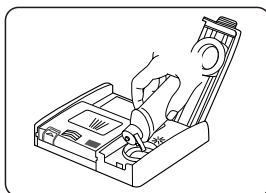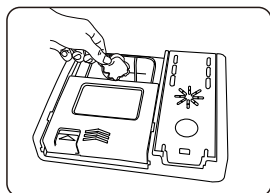

4 Start dishwasher.

▶||
 Start/Resume

Operating instructions

STEP 1

Prepare and Load the Dishwasher

Important:


Remove leftover food, bones, toothpicks, and other hard items from the dishes.

Remove labels from containers before washing.


8-Place loading pattern (dishwasher rack features vary by model)




- | | |
|-------------------|-----------------|
| 1. Tea spoons | 2. salad forks |
| 3. Dinner forks | 4. Knives |
| 5. Serving spoons | 6. Serving fork |

 

Silverware basket

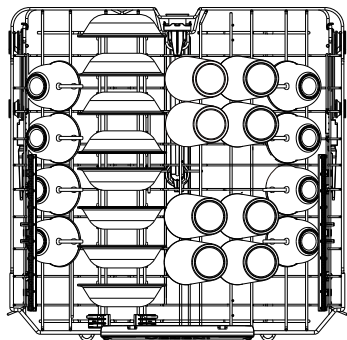

Upper rack

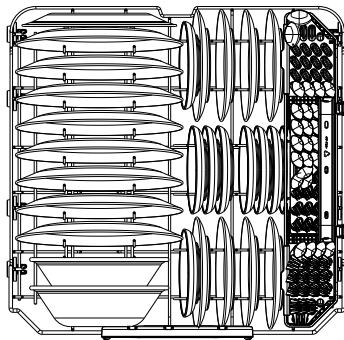


Lower rack


14-Place loading pattern (dishwasher rack features vary by model)




- | | |
|-------------------|-----------------|
| 1. Tea spoons | 2. salad forks |
| 3. Dinner forks | 4. Knives |
| 5. Serving spoons | 6. Serving fork |

 

Silverware basket

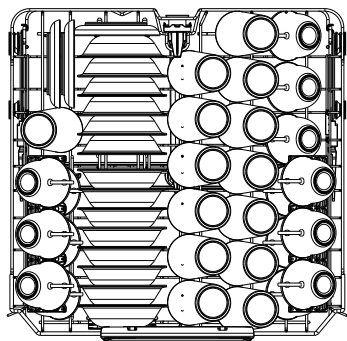


Upper rack

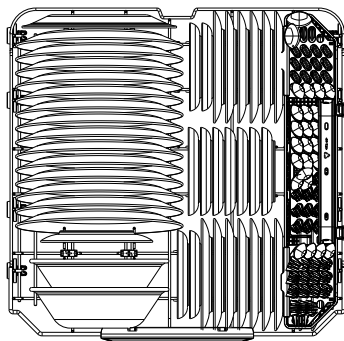


Lower rack

Operating instructions


15-Place loading pattern (dishwasher rack features vary by model)

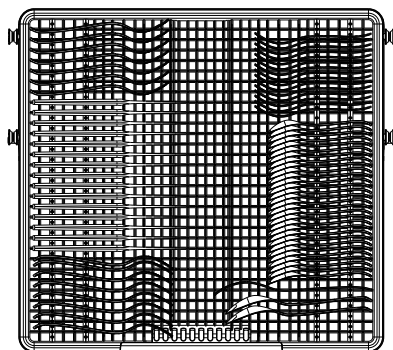

knife and fork basket

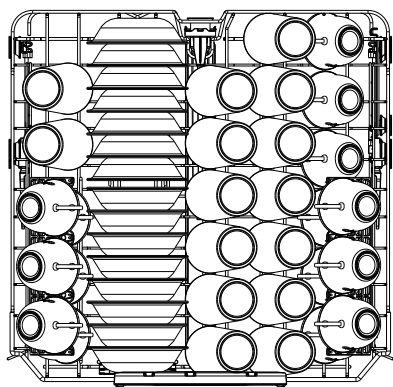


Upper rack

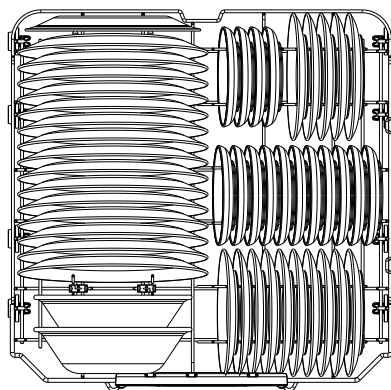


Lower rack

Operating instructions


16-Place loading pattern (dishwasher rack features vary by model)

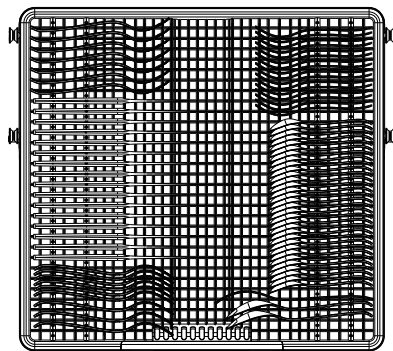



knife and fork basket

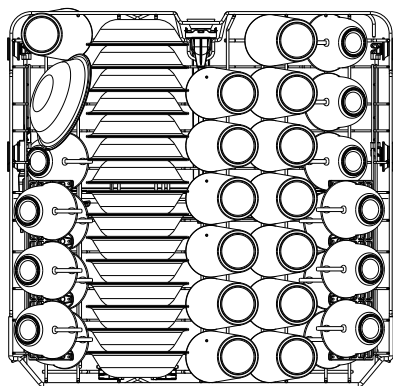

Upper rack

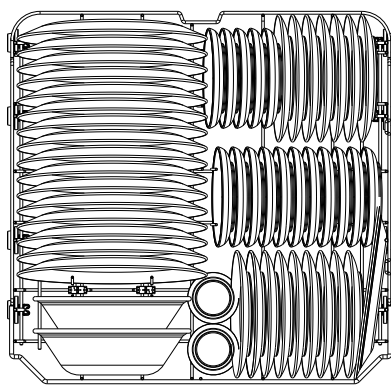

Lower rack

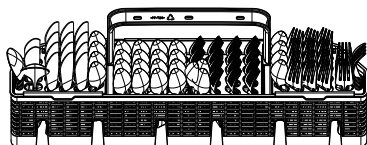
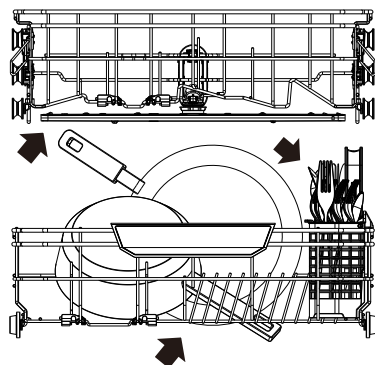


1. Check that nothing blocks the upper or lower spray arm. Items in rack can block the spray arms.
2. Check that when the dishwasher door is closed, no items are blocking the detergent dispenser.
3. Tough soiled items should be loaded with soiled surfaces facing down and inward to the spray.
4. This will improve cleaning and drying results.
5. Avoid overlapping items like bowls or plates that may trap food.
6. Place plastics, small plates, and glasses in the upper rack. Wash only plastic items marked "dishwasher safe."
7. To avoid thumping/clattering noises during operation, load dishes so they do not touch one another.
8. Make sure lightweight load items are secured in the racks.
9. When loading silverware, always place sharp items pointing down. Mix items in each section of the basket with some pointing up and some down to avoid nesting. Spray cannot reach nested items.
10. Use slots in the covers and suggested loading patterns to keep your silverware separated for optimum wash.


Operating instructions

STEP 2

Add Detergent

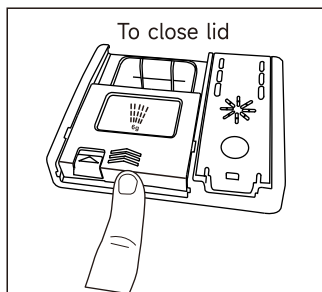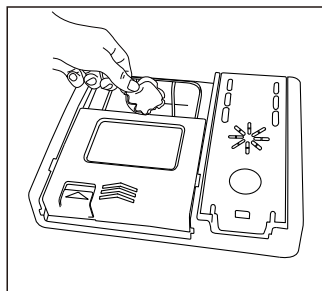

Place selected detergent in the dispenser.
Place finger, as shown, and slide lid closed. Press firmly until it clicks.

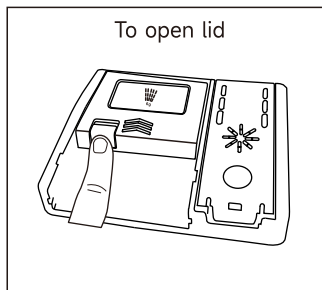

Push OPEN, as shown, and the lid will slide open.

Premeasured Detergents

High quality premeasured tablets and packs are recommended for improved performance.

Quality tablets and packs have been proven better than powder, liquid, or gel detergents at reducing filming on dishes. Using tablets and packs over time will start to reduce or eliminate white film. They are suitable for all hardness and soil levels. Also, by using a rinse aid, you can minimize repeat buildup of white film (not all packs and tablets contain rinse aid). Always place premeasured detergents in main compartment and slide lid closed.

NOTE: Follow instructions on the package when using other dishwasher detergent types. See the complete owners manual for more details about powders, liquids, and gels.

Use automatic dishwasher detergent only. Add detergent just before starting a cycle.

Fresh automatic dishwasher detergent results in better cleaning. Store tightly closed detergent container in a cool dry place.


full main wash compartment contains 2 Tbsp. (30 ml).

IMPORTANT: Extremely hard water mineral deposits (15 grains per U.S. gallon or more) can cause damage to your dishwasher and make it difficult to achieve good results. A water softener is recommended to avoid damage and achieve good results.

NOTE: Follow instructions on the package when using other dishwasher detergent types.

STEP 3

Rinse Aid

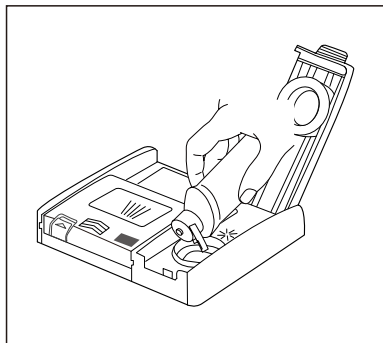


IMPORTANT: Your dishwasher is designed to use rinse aid. The use of rinse aids greatly improves drying by allowing water to drain from the dishes after the final rinse. Rinse aid also keeps water from forming droplets that can dry as spots or streaks.

Filling the dispenser

The dispenser holds 5 oz (150 mL) of rinse aid. Under most conditions this will last 1 to 3 months.

NOTE: Indicator reads correct fill level when door is completely opened.

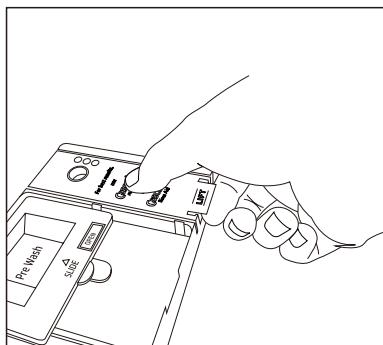

To add rinse aid, open the rinse dispenser lid by gently pushing in the center of the lid with your thumb and pulling up on the edge.

Pour rinse aid into the opening until the dispenser is full. Do not overfill.

Clean up any spilled rinse aid. Spilled rinse aid can create excessive suds.

Then, close the dispenser by pushing down gently on the lid.

Operating instructions

STEP 4


Select a Cycle

Efficient dishwashers run longer to save water and energy. Cycle times may increase or decrease depending on selections. Estimated cycle times after calibration are listed in the “Cycle and Options Descriptions” chart in the following section. Select the desired cycle by pressing the Cycles button. Each time you press the Cycles button, it will advance to the next available cycle.



Select Options

See the “Cycle and Option Descriptions” charts in the following section. You can customize the cycles by pressing the options desired and pressing Start/Resume.

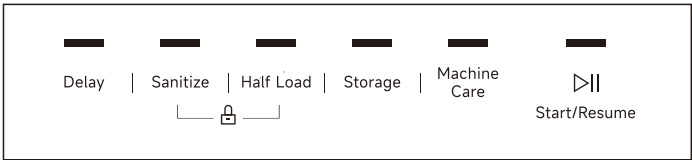

Follow the Progress of the Dishwasher

Lower right side of the dishwasher while it start running; The light flashes for a few seconds and goes out when the washing is completed.

The light will flash continuously when fault occurs during washing process, and you need to check the cause of the failure at this time

After selecting the program(cycle), each time you press the "Delay" button, the time of (88:88) display will increase by 30 minutes on the previous basis. Press and hold the "Delay" button for more than 1 second, and the time will increase 1 hour. It will enter "Delay" mode if press "Start" or do not operate within five seconds.

STEP 5

Start or Resume a Cycle

Run hot water at the sink nearest your dishwasher until the water is hot. Turn off water.

For best dishwashing results, water should be 120°F (49°C) as it enters the dishwasher.

Press Start button. On top control models the door must be firmly closed within 4 seconds of pressing Start. If door is not closed within 4 seconds, the Start button light will flash, the cycle will not start.



Start/Resume

IMPORTANT: After a cycle is started (even if Delay Hours has been selected), if the door is open longer than 4 seconds, you need to press the START again .

Technical parameter list

Technical Parameters

Name	Dishwasher
Model	DH16-DZ601PQSNA
Dimensions (W x D x H)	23 1/2 x 22 5/8 x 33 5/8" (598 X 574 x 855mm)
Installation mode	Build in
Rated voltage	120V AC
Rated frequency	60Hz
Rated power	1200W
Drying method	Auto open dry+Air exhaust
Capacity	16 settings
Rated water pressure	0.04-1.00MPa
Net Weight	38.5KG

Note: Due to product improvement and technical update, if the parameters are changed, please refer to the actual product without prior notice.